


1、 The second round of driver installation needs to be done in the device manager. Right-click the device without the driver installed, click 'Update Drivers', and then select 'Browse my computer for drivers'.

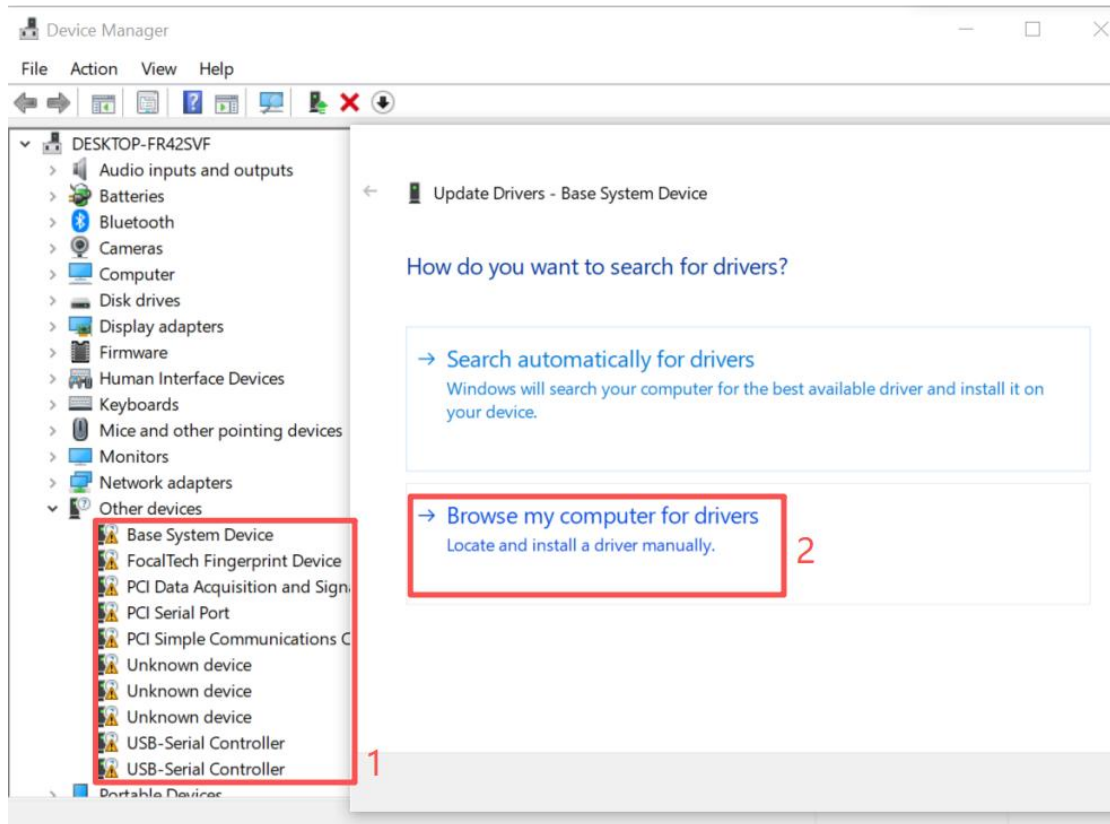

2、 Click "Browse", select the folder to download RTC-I116 Driver, then click "Next" to start searching for the driver.

